

Installation steps


1. Install the rails and the related accessories. Fix the hinge plate on side panel of the fixed door.
Install the upper rail: Place the roller, stopper into the rail and fix the rail with self-tapping screws.
Note: Before installation, ensure that the inner surface of the track is clean and free of impurities.
Check and confirm the rollers are free from damages or scratches, can slide smoothly.
The stopper direction should be same as the door opening direction.



Install the hinge plates.

2. Install the full overlay hinges, plastic hinges, rollers for side folding doors according to the instruction as below and the Installation parameters mentioned above.


Pay attention to the installation direction of the plastic hinge.
The 3-hole side is on the fixed door.

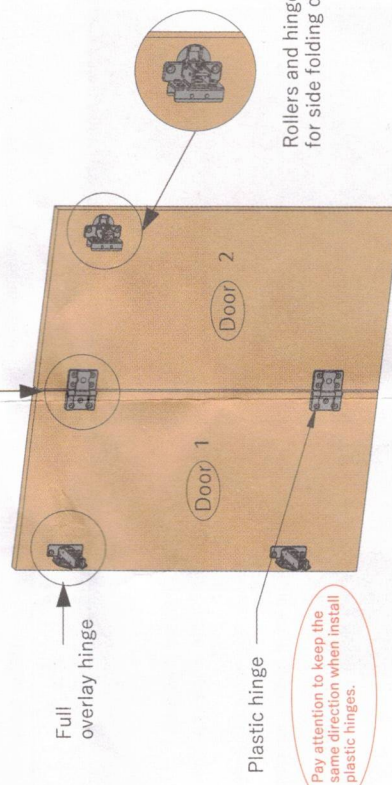


Pay attention to keep the same direction when install plastic hinges.

Rollers and hinges for side folding doors


3. Hang the door. Connect the door 1,2 with the roller accessories and adjust the door gaps.
3.1 Install the hinges on side door. Align the hinge to the plate and press it, as the below picture shows.
The hinges are clip on hinges, used to fix door 1.

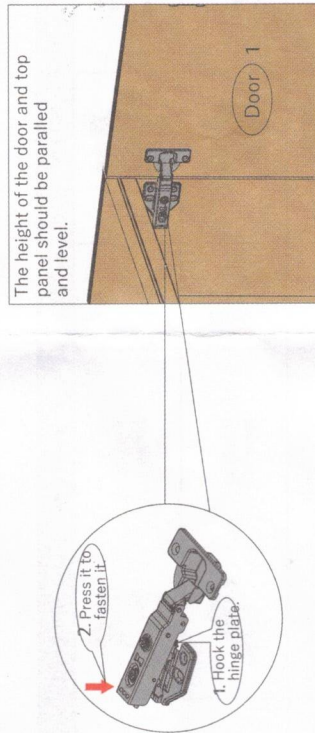

- 3.2 Hang the hinges of door 2 on the hanging roller accessories.
Lift the door upwards slightly to have easier installation.
Fasten the bottom screws anticlockwise after connection.
As shown in the picture below:

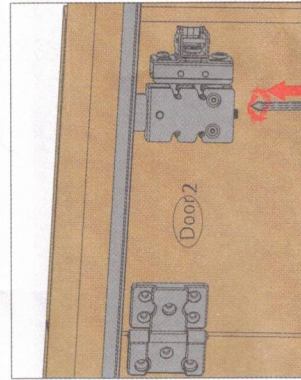

- 3.4 Adjust the doors

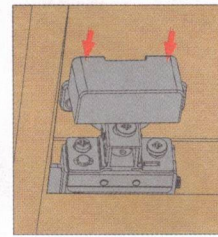

Left and right adjustment for coverage between door and side panel.

Forward and backward adjustment for gap between door and cabinet.

Forward and backward adjustment for gap between door and cabinet.

Up and down adjustment for parallel between door and top panel.